

For use with the Aqua-Luminator® Light and Water Flow for Aboveground Pools

INSTRUCTIONS

(Fig. #1)

UNLOCKED

OPEN BYPASS

FLOW DIRECTOR

(Fig. #3)

- Determine which side of the Flow Director the water is jetting from. (Fig. #1)
- 2. Turn the pump off.
- Rotate the "Flow Director" pointing the flow of water upwards. (Fig. #2)
- 4. Check the back of fountain attachment to ensure that the lock is in the unlocked position. (Fig. #3)
- Snap fountain into position on the Flow Director allowing the ribs on the Fountain to fit into the slots in the Flow Director.
- 6. Turn the lock as indicated. (**Fig. #4**) If the fountain is positioned properly, the lock will turn freely.
- 7. Open by-pass fully. (Fig. #4)
- 8. Direct the fountain head toward the center of the pool (away from under the top rail). (Fig. #4)
- 9. Turn the pump on.

FIT RIBS INTO SLOTS IN FACE

 Adjust spray distance and height by pivoting fountain top and / or by adjusting the bypass valve.

(**Fig. #5**) (Fig. #4) (Fig. #5)

TO LOCK



A WARNING

RISK OF BODILY INJURY! DO NOT USE THIS DEVICE AS A STEP OR HAND HOLD. USING THIS DEVICE AS A STEP OR HAND HOLD CAN RESULT IN BODILY INJURY OR PROPERTY DAMAGE.

Pentair Water Pool and Spa, Inc.

1620 Hawkins Ave., Sanford, NC 27330 • (919) 566-8000

10951 West Los Angeles Ave., Moorpark, CA 93021 • (805) 553-5000

Visit us on the Internet at: www.pentairpool.com or www.staritepool.com

© 2006 Pentair Water Pool and Spa Inc. All rights reserved. This document is subject to change without notice



(Fig. #2)

ADJUST FOR

HEIGHT

