


ASSEMBLE Top Seat, Vertical and Cover


AQUALINE FRAME

a) PRE-ASSEMBLING VERTICALS


Put Resin Upper Joint as shown in the Figure, tighten up #12 Sheet Metal Screws.

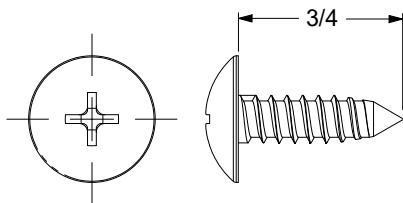

P.No.0341
#12 Sheet Metal Screw

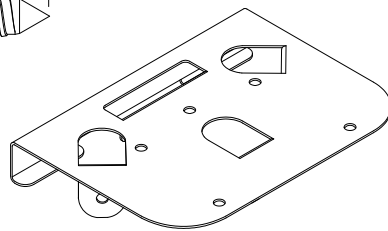

Upper Joint


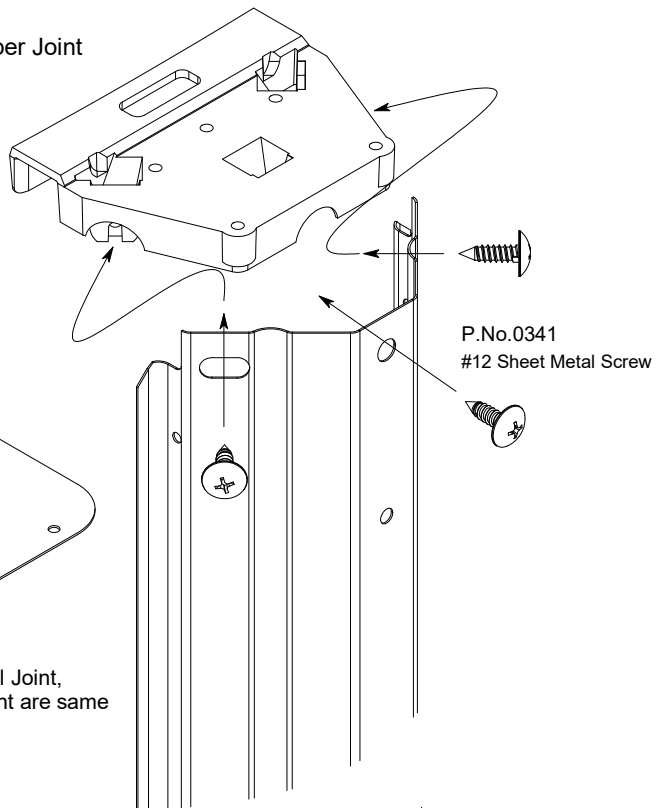


P.No.0341
#12 Sheet Metal Screw

b) INSTALLING VERTICALS

Hook Assembled Resin Upper Joint over the top rail. Secure the bottom of vertical to Resin Lower Joint by #12 Sheet Metal Screws, Continue installing verticals in this manner All around the pool.

In case of using Steel Joint, Upper and Lower Joint are same

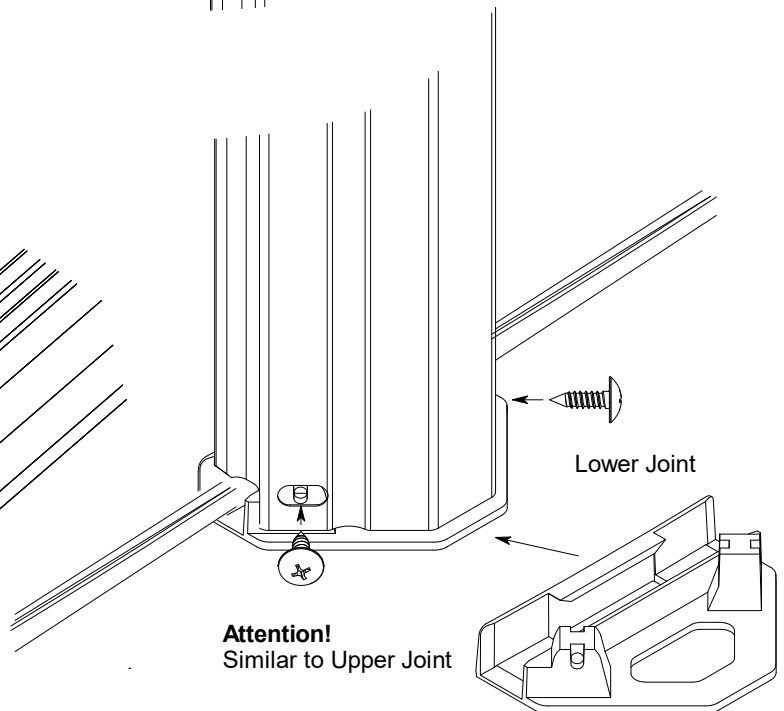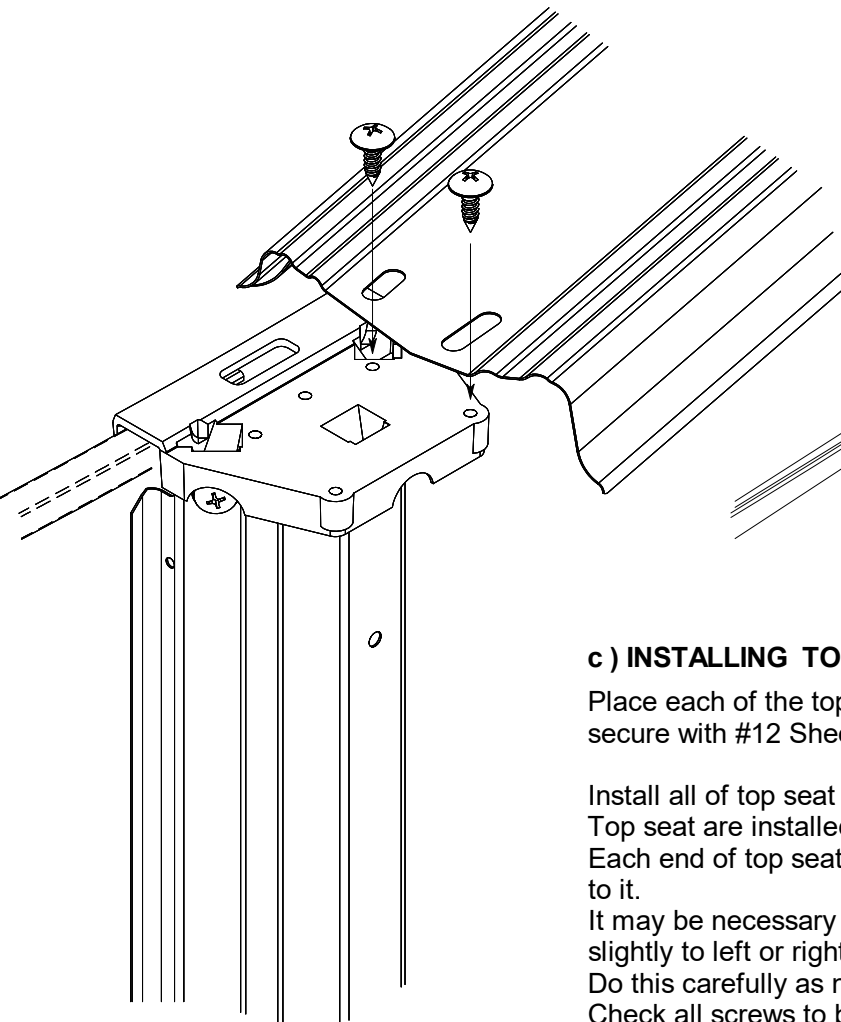

Lower Joint

Attention!
Similar to Upper Joint


c) INSTALLING TOP SEATS

Place each of the top seat over the upper joints and secure with #12 Sheet Metal Screws.

Install all of top seat in this way around entire pool. Top seat are installed between verticals. Each end of top seat rest on upper joint and attached to it. It may be necessary to move the complete verticals slightly to left or right to accommodate the top seat. Do this carefully as not disturb the earth mound, Check all screws to be sure they are tight.

d) INSTALLING SEAT COVERS


P.No.0341
#12 Sheet Metal Screw

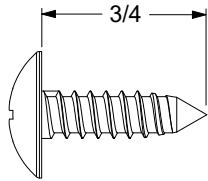

P.No.0341
#12 Sheet Metal Screw

Put smaller cover to inside of joint, vertical.
Put #12 Sheet Metal Screw then tighten up.
Put larger cover to outside of joint, vertical and slide into smaller cover.
Put #12 Sheet Metal Screw to the hole located side of vertical as shown. do the same on the other side of verticals.

Note: left side of Top seat on the figure is not shown for easy understanding, but actually top seat should be attached before this procedure.

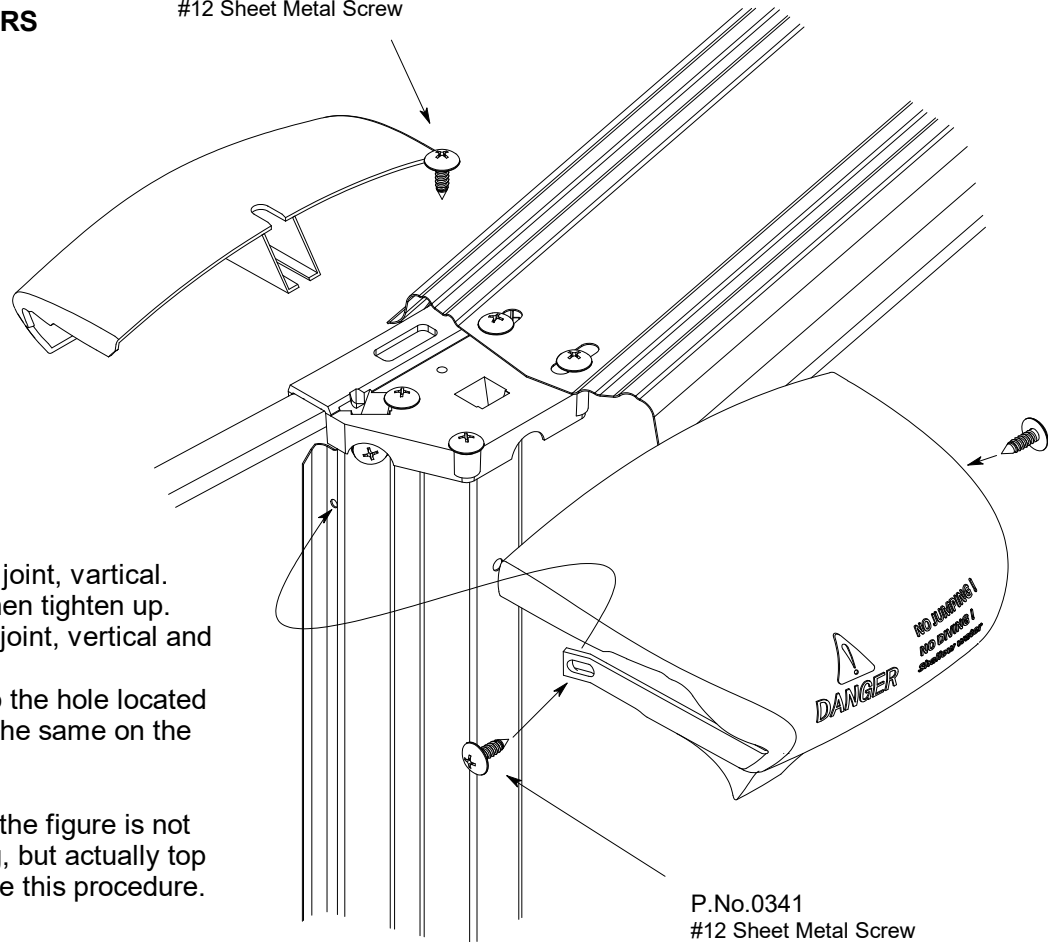



P.No.0341
#12 Sheet Metal Screw

FOR OVAL POOL ONLY

e) INSTALLING OVAL SIDE TOP SEAT AND SIDE SEAT COVERS

Use #12 Sheet Metal Screw to Install oval side top seats on top of Resin side upper joint P.No.3177.
Cut two prong of inside of side seat cover as shown in the figure, then attach side seat cover by placing it from inside of pool in right position as shown in the figure.


Put #12 Sheet Metal Screw to side seat cover and tighten it up. Put seat cover cap on top of side seat cover.

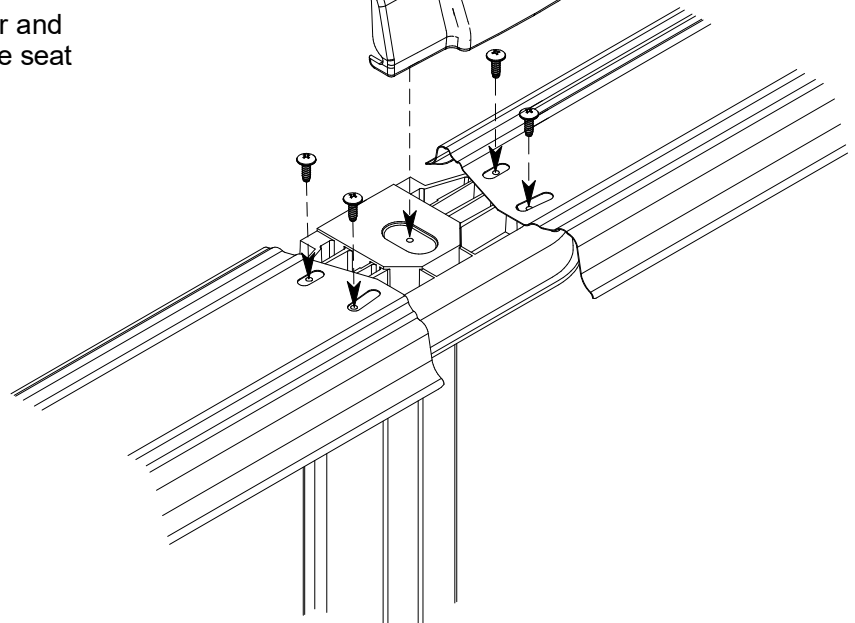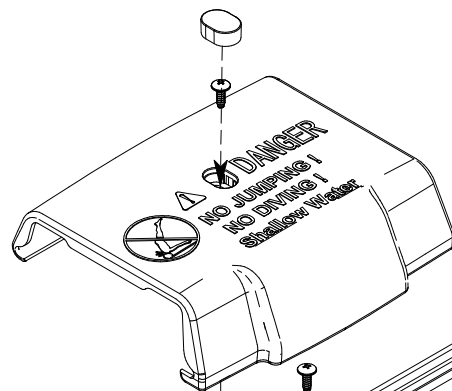


ASSEMBLAGE DE LA MARGELLE ET POTEAUX DE STRUCTURE AQUALINE

a) PRÉ-ASSEMBLAGE DES POTEAUX


Installer la plaque du haut en résine tel qu'illustré.
Visser et bien serrer les visses métalliques #12.

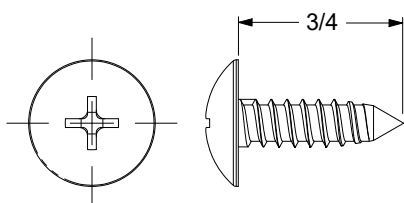

P.No.0341
Visse métallique #12


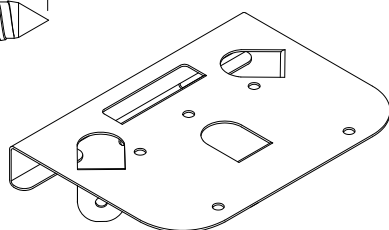


En cas d'utilisation de joint en acier, Plaque du haut et du bas sont identiques.

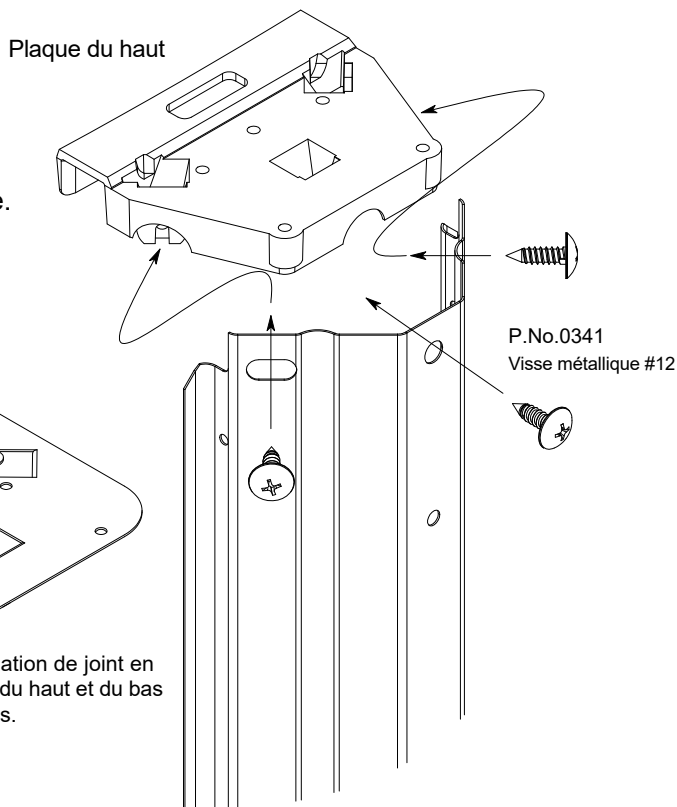

b) INSTALLATION DES POTEAUX

Installer le couvre joint par-dessus le joint de margelles. Assembler la plaque du bas en résine au bas du poteau. Visser et bien serrer les visses métalliques #12.
Répéter l'opération pour tous les poteaux autour de la piscine.

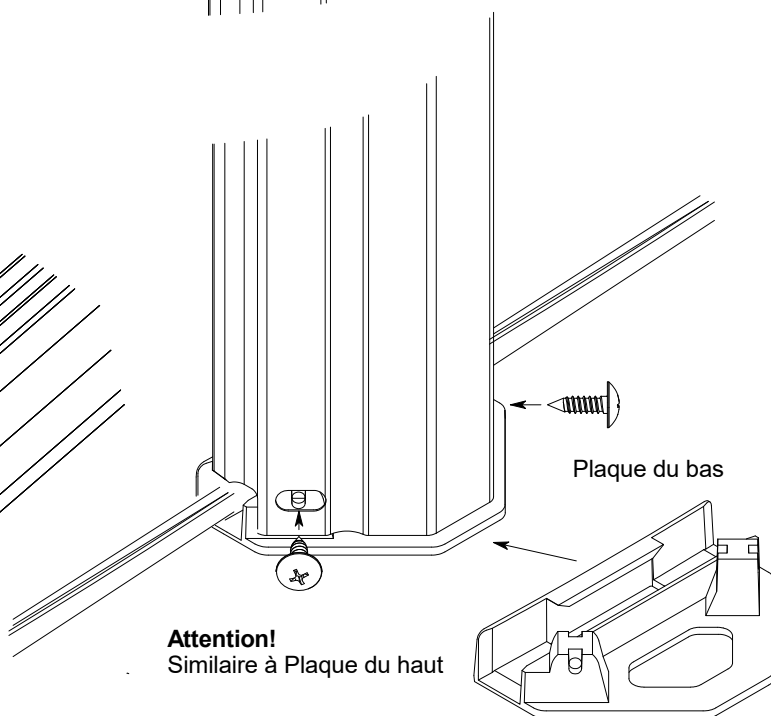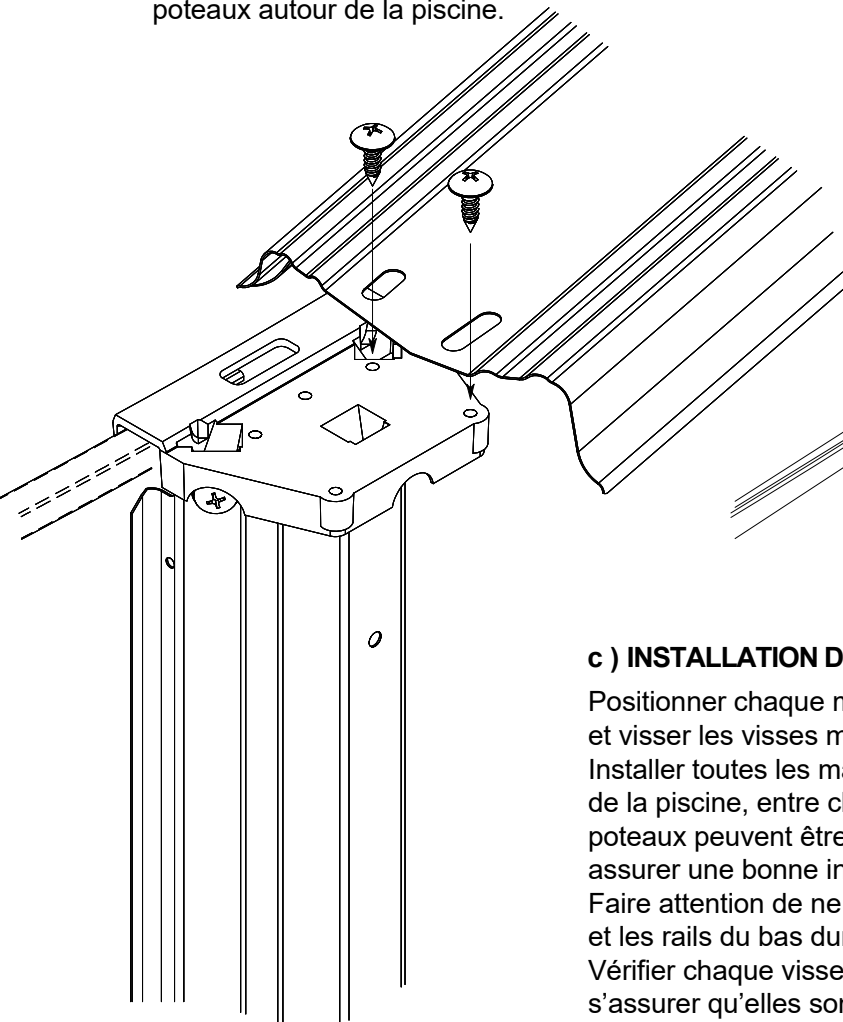


Attention!
Similaire à Plaque du haut

c) INSTALLATION DES MARGELLES

Positionner chaque margelle sur les plaques du haut et visser les visses métalliques #12.
Installer toutes les margelles de cette manière autour de la piscine, entre chaque poteaux. Le haut des poteaux peuvent être légèrement bougés pour assurer une bonne installation des margelles.
Faire attention de ne pas bouger le bas des poteaux et les rails du bas durant l'opération.
Vérifier chaque visse métalliques #12 afin de s'assurer qu'elles sont bien serrées.

d) INSTALLATION DES COUVRE-JOINTS

P.No.0341
Visse métallique #12

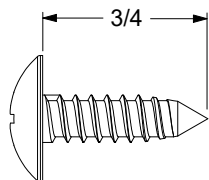


P.No.0341
Visse métallique #12

Installer la petite partie du couvre-joint sur le dessus du poteau à l'intérieur de la piscine et bien le fixer avec la visse métallique #12 dans la plaque du haut.

Installer la grande partie du couvre-joint à l'extérieur de la piscine en le glissant dans la petite partie déjà en place, et le fixer de chaque côtés avec les visses métalliques #12, tel qu'illustré.

Note: La margelle de gauche est non illustrée sur le schéma mais doit être en place avant l'installation du couvre-joint.

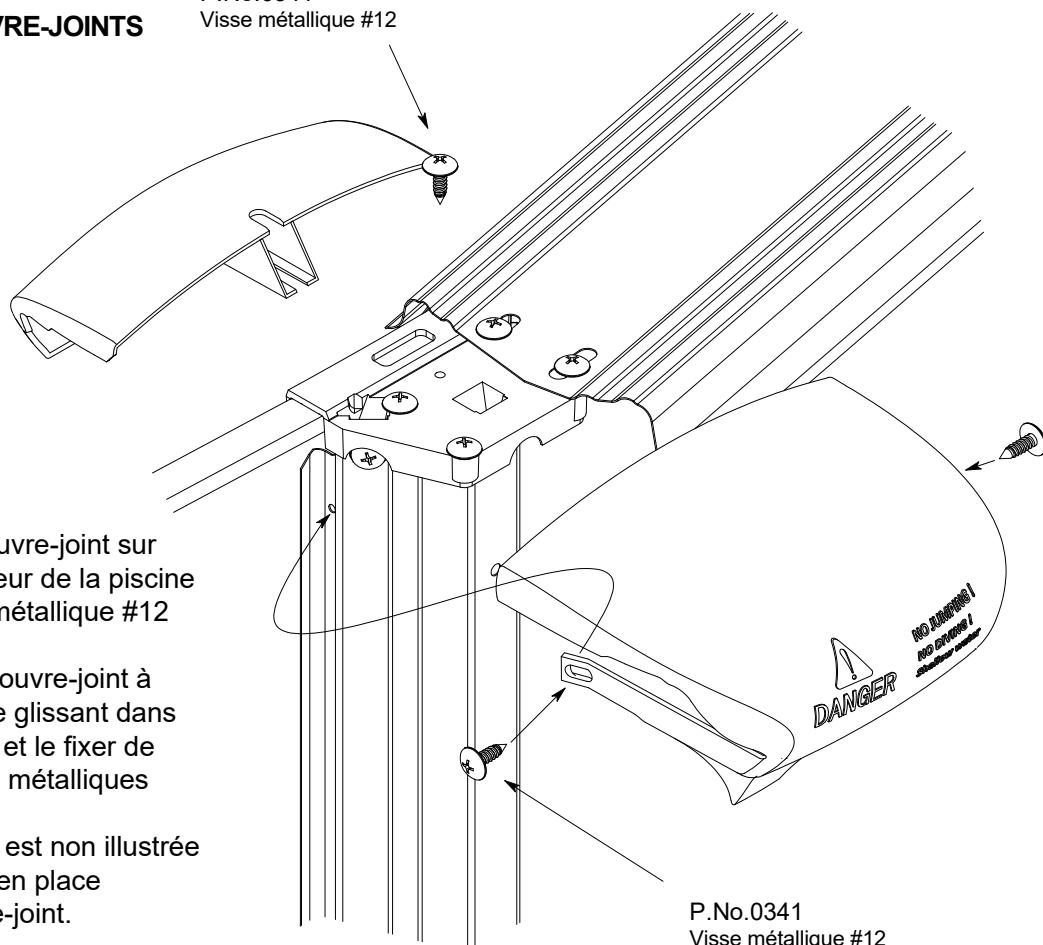

P.No.0341
Visse métallique #12

POUR PISCINES OVALES SEULEMENT

e) INSTALLATION DES COUVRE-JOINTS DE CÔTÉ SUR LES PISCINES OVALES.

Utiliser les visses métalliques #12 pour fixer les margelles sur les plaques du haut. P.No.3177.
Couper deux broches de l'intérieur de couvre-joint partie latérale. Fixer le couvre-joint de l'intérieur de la piscine dans la bonne position tel qu'illustré.
Utiliser les visses métalliques #12 pour fixer les couvre-joints par-dessus les margelles, dans les plaques du haut.

