



Grommet Installation

Instructions: After placing the grommet pieces around the solar cover, gently tap with a rubber mallet to secure in place.

Please note, it is not necessary to pre-punch a hole. The grommets will create the hole during installation

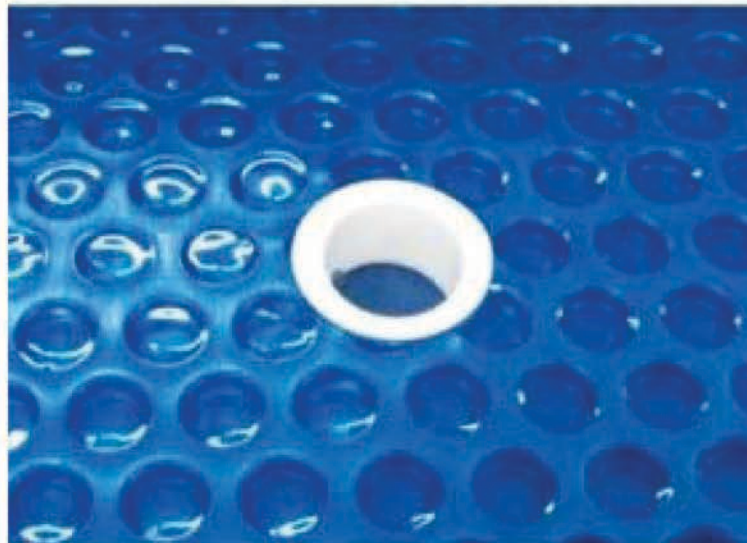

Grommet placement without a reel:

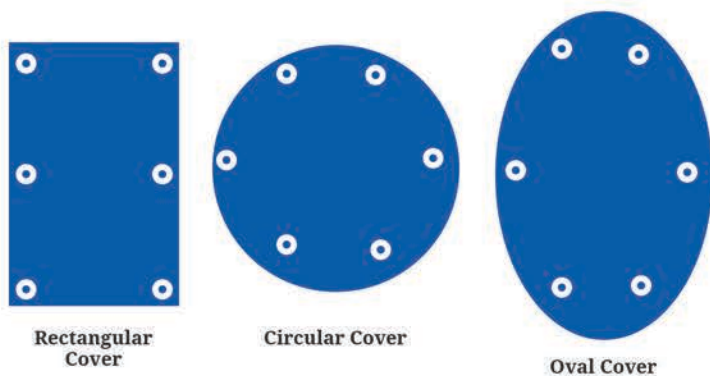

Grommet placement with a reel:

